
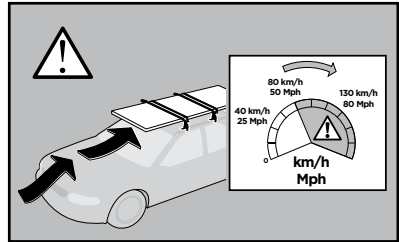
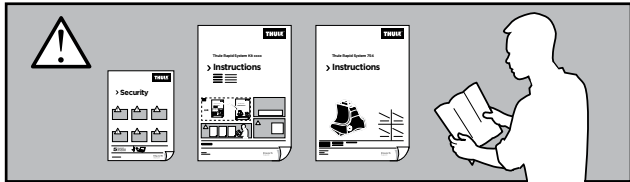
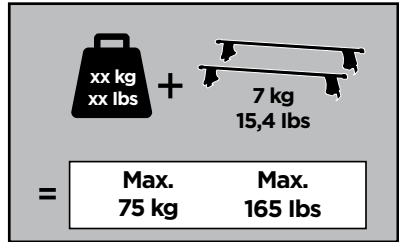


Thule Rapid System Kit 1180

> Instructions

AUDI TT, 3-dr Coupé, 98-06 / *00-06


*North America

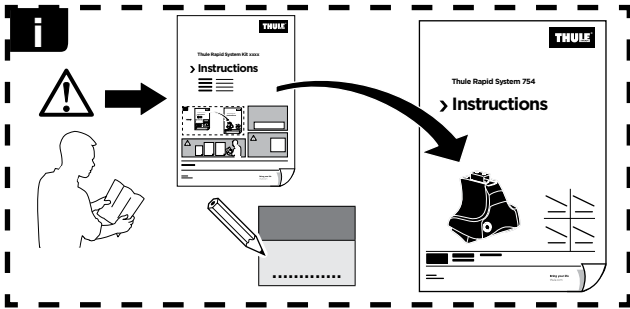

ISO 11154-E




04 x4



339 x4






x1



x1

1


	X (scale)	X (mm)	X (inch)
AUDI TT, 3-dr Coupé, 98-06 / *00-06	40	1051	41 ³/₈

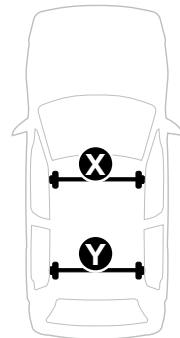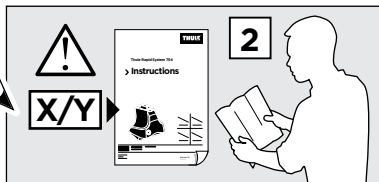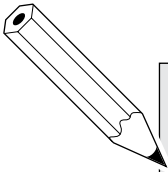


	Y (scale)	Y (mm)	Y (inch)
AUDI TT, 3-dr Coupé, 98-06 / *00-06	40,5	1056	41 ⁵/₈

2

AUDI TT, 3-dr Coupé, 98-06 / *00-06

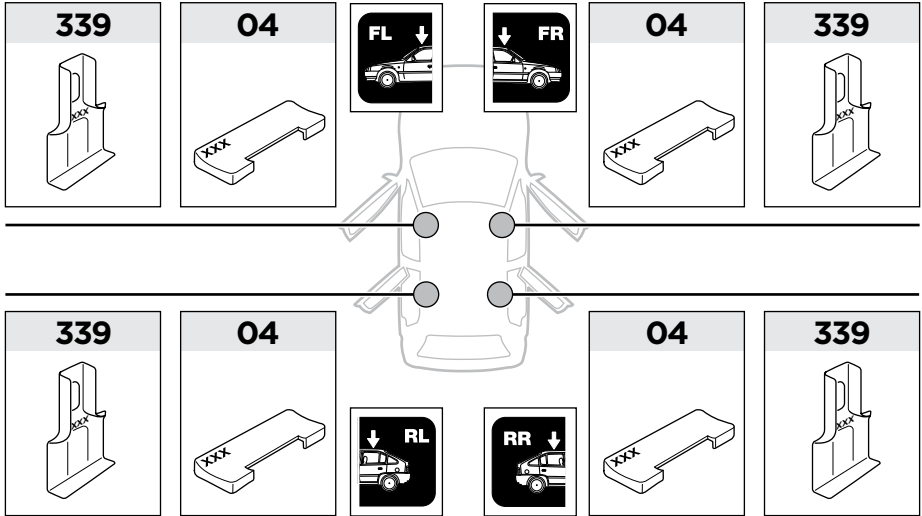

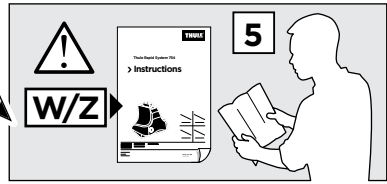3

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI TT, 3-dr Coupé, 98-06 / *00-06	90	620	3 1/2	24 3/8

