



# 1

## Kit 187107


VOLKSWAGEN California, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Caravelle, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Multivan, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Shuttle, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Transporter, 4-dr Double cab, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Transporter, 4-dr Van, (T5) 03-15, (T6) 15-




ISO 11154-E

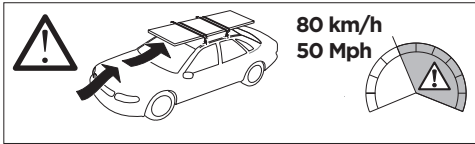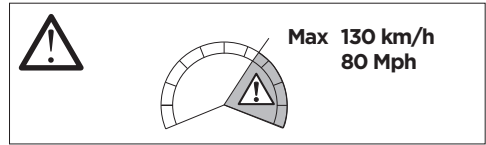


This kit is only for vehicles with fixpoint mounting.




**1**  
KIT







062 **x2**




116 **x2**




004 **x4**




5 mm  
54692 **x1**




M6x53 mm  
54704 **x2**




M6x69 mm  
54704 **x2**




Safety




**2**  
KIT







062 **x4**




004 **x4**



5 mm  
54692 **x1**




M6x53 mm  
54704 **x4**




Safety

## Kit 187001




EXT.  
PAD



760 **x2**


Bring your life  
 thule.com

**i**

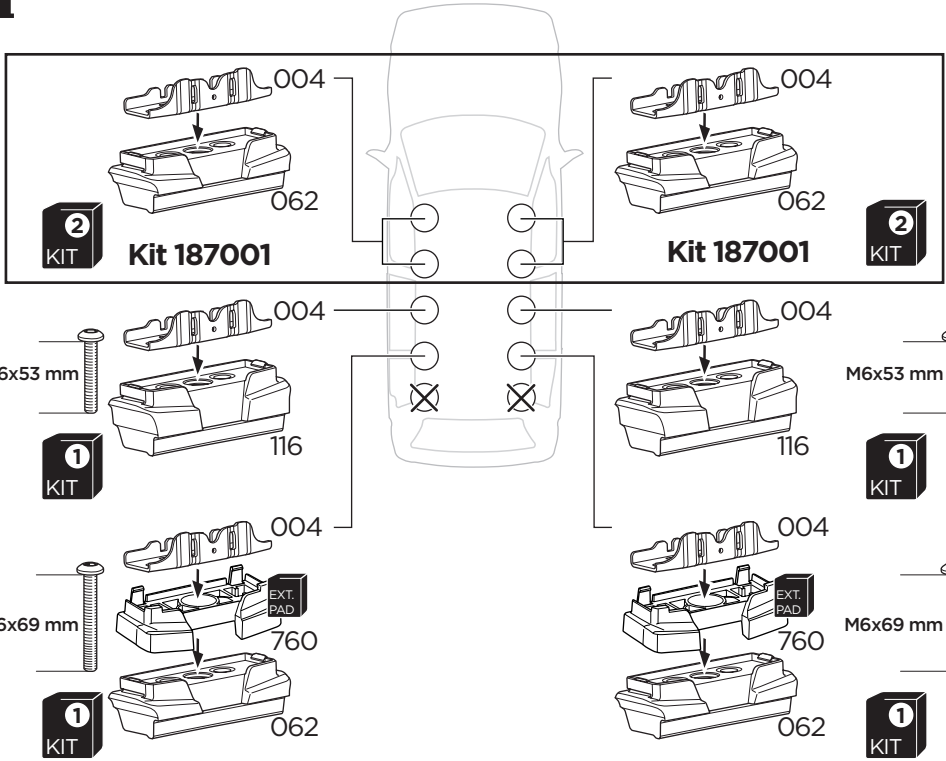


1


A

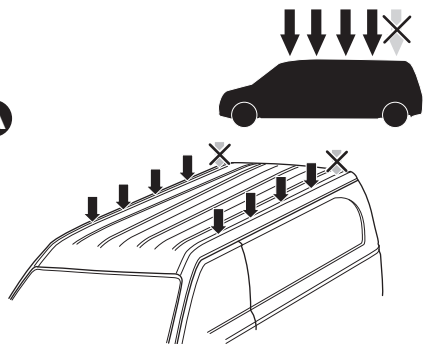


B

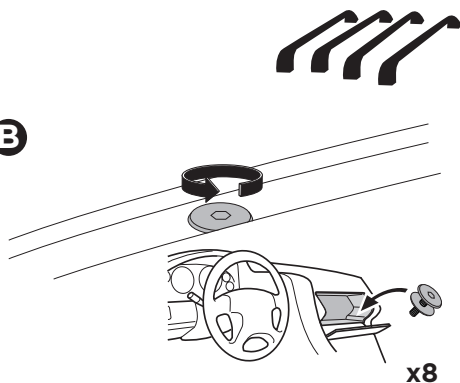


C

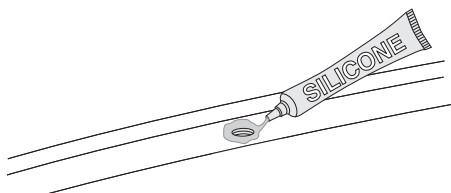


2

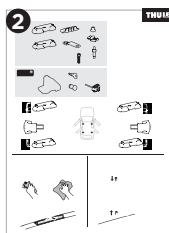



Kit 187001

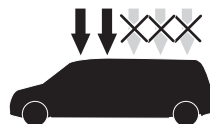


3



8 Nm

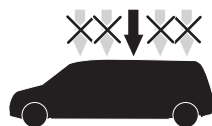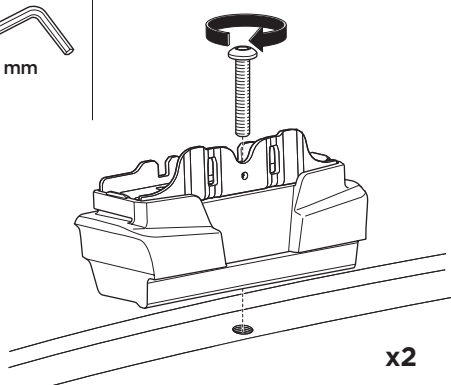

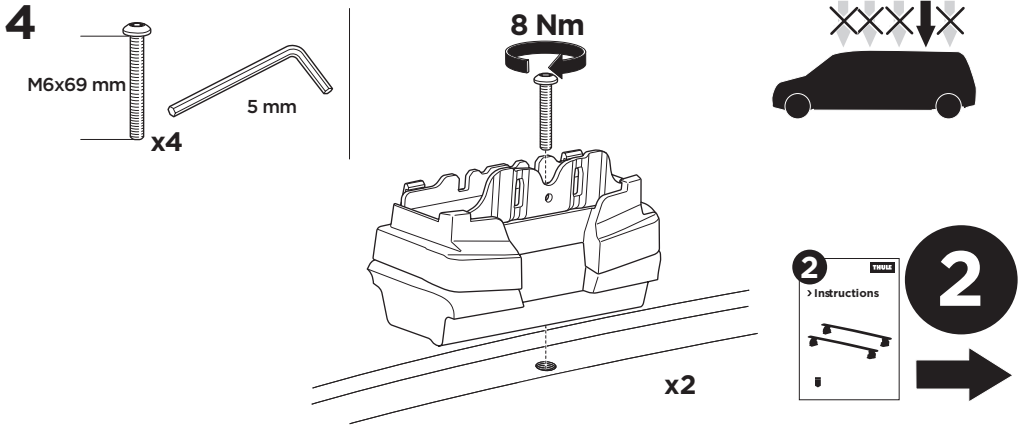

**i**

